

customcargrills.com LLC PO Box 90004 Grand Rapids, MI 49509 (616) 889-2985

Year: 2000-2002 Make: Chevy


Model: Monte Carlo w/ Razzi Kit

INSTALLATION INSTRUCTIONS

What's in the Box: (1) Front Mesh Grill, (1) Rear Mesh Grill

Tool List: Short Screws (or cable ties), Adhesive

Mesh Installation:

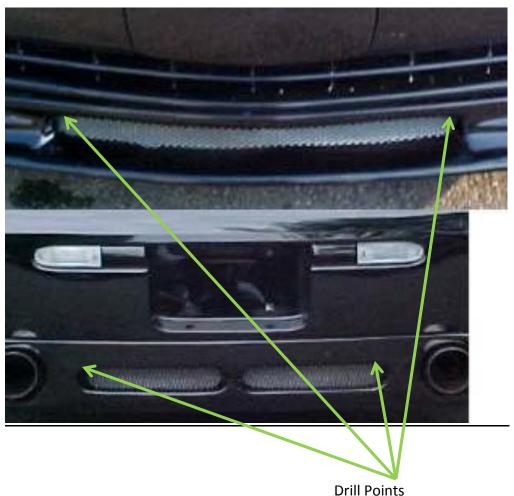

- 1. Shape and bend grill insert to fit the opening in the front air dam from behind the bumper.
- 2. Drill holes where they cannot be seen to insert screws (or cable ties) at top corners of both back and front.
- 3. Use body panel adhesive (Epoxy or Automotive Goop works well too) where needed along bottom to keep the insert from being able to move.

PLEASE NOTE: The instructions provided are the suggested installation method. If you feel that the installation instructions are inadequate or unsafe then please feel free to develop your own installation techniques that fit your exact needs. customcargrills.com IIc is not liable for any personal or property damage resulting from our products. If you have any suggestions on how to improve our installation instructions then please email your comments to info@customcargrills.com.